

USER'S GUIDE

INTRODUCTION

With your PT-70, you can create labels for virtually any application. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cartridges available allows you to print labels in different widths and exciting colors.

Read this manual carefully before using your machine and keep in a handy place for future reference.

Industry Canada Compliance Statement (Canada Only) Avis de conformité aux normes d'Industrie Canada (Canada seulement)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

GENERAL PRECAUTIONS

- Use only Brother M tapes with this machine. Do not use tapes that do not have the **2** mark.
- Do not clean the machine with alcohol or other organic solvents. Only use a soft, dry cloth.
- Do not touch the print head mechanism. Use a soft wipe (e.g. a cotton swab) when
- To avoid injuries, do not touch the cutter's edge

cleaning the print head

- To prevent damage or breakage of the LCD glass, do not press on the display. • Do not put any foreign objects into or heavy objects on the machine.
- Do not leave any rubber or vinyl on the machine for an extended period of time,
- otherwise the machine may be stained. . Do not get the machine wet, such as by handling the machine with wet hands or
- spilling beverages onto the machine. • Do not expose the machine to extremely high temperatures or high humidity. Never leave it on the dashboard, in the back of your car, near heaters or other hot
- appliances. Keep it out of both direct sunlight and rain. • Avoid using the machine in extremely dusty places.
- · Depending on the environmental conditions and the applied settings, some characters or symbols may be difficult to read
- . Do not pull on the tape being fed from the P-touch labeler, otherwise the tape
- cassette or P-touch labeler may be damaged. • Do not attempt to cut the tape while printing or feeding since this will damage the tape.
- . Do not try to print labels using an empty tape cassette set in the P-touch labeler. Doing
- · Remove the batteries if you do not intend to use the machine for an extended period of time. (Note: When power is disconnected for more than two minutes, all text and
- format settings will be cleared. Language, unit and clock settings will also be cleared.) · Make sure that the power is turned off when replacing batteries or tape cassette.
- Do not use old and new batteries together or mix alkaline batteries with other type batteries, or set the positive and negative end in the wrong position. Otherwise, the batteries may leak or be damaged.

P-touch TAPE 1 PREPARATION

Unpacking Your P-touch Labeler

Check that the package contains the followings before using your P-touch labeler.

M tape cassette







Included items may differ by distribution.

Power Supply & Tape Cassettes


Remove the back cover by pressing in the rough area at the top end of the

If a tape cassette is already installed remove it by pulling it straight up. Also, if batteries are already installed, remove . Make sure that the power is turned off when replacing batteries or tape


cassette.

new ones.



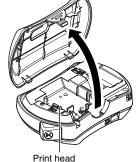


Insert four new AAA-size alkaline batteries (LR03), making sure that their poles point in the correct directions. Always replace all four batteries at the same time using brand

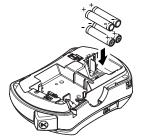

nsert a tape cassette, making sure that it snaps into place



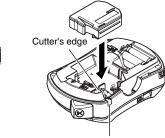

 Make sure that the end of the tape feeds under the tape guides. . Use only Brother M tapes with this machine.


Attach the back cover by inserting two hooks at the bottom into the slots on the machine, then pushing down firmly on the cover until it snaps into place. After you have installed the tape, feed the tape (\bigcirc shift + \bigcirc) once and then push in the tape cutter lever to cut




Tape cutter lever

2 OPERATION

Keyboard & LCD

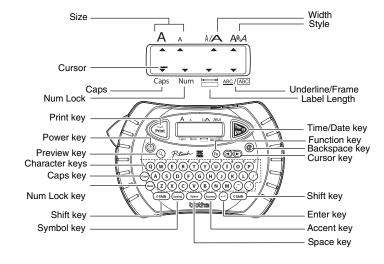



• Use Cursor key while holding down Shift key to go to beginning /

Initial Setting

end of the text

1 Turn on your machine. Supply power by using four AAA batteries, and then press (1)




inch Choose a unit with and press and press

4 Set Date (MM/DD/YY) and Time (hh:mm). Example: setting the clock to March 20th 2006, 10:30AM

Date (MM/DD/YY) 03/DD/06 MM/01/06 03/20/YY input "06" input "03" input "20" Time (hh:mm) hh:00 10:mm input "10" AM

Select AM/PM with and press (-) You can also confirm the figure and move to the next setting by using right cursor key.



• To initialize the P-touch labeler back to factory settings, turn off the machine and then while holding down (Ashift) and (R), press (1) to turn the machine back on. Finally, release (shift) and (R)

REFERENCE

Troubleshooting

Error message Message Cause/Remedy The batteries are weak. Replace them with new ones Invalid nvalid number is selected for Label Length setting. No Text • The Print key or Preview key is pressed when no text is You tried to set Copies (copy printing) when no text is Line Lmt Line Limit. You can have up to 2 printable lines. You tried to enter a 3rd line by pressing Enter key The maximum number of characters (80 characters) has already been entered. Text Limit. The text length exceeds the selected label length or the selected Auto Format setting length. Text Lmt

What to do when

Problem	Solution
The display stays blank after you have turned on the machine.	Check that the batteries are correctly inserted. If the batteries are weak, replace them.
Language setting of the machine is incorrect.	 Turn off the machine and then while holding down \$\line\$shift and \$\mathbb{R}\$, press (1) to turn the machine back on. Finally, release \$\line\$shift and \$\mathbb{R}\$. Note: The text and formats in the display are erased. Also the language, unit and clock settings will be cleared.
The machine does not print, or the printed characters are not formed properly.	Check that the tape cassette has been inserted correctly. If the tape cassette is empty, replace it. Check that the back cover is properly closed.
The setting has cleared on its own.	The batteries may be weak. Replace them. When power is disconnected for more than two minutes, all text & formats in the display will be lost. Language, un and clock settings will also be cleared.
A blank horizontal line appears through the printed label.	There may be some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe th print head with an up-and-down motion.
The machine has "locked up" (i.e., nothing happens when a key is pressed, even though the machine is on).	Turn off the machine, and then while holding down \$\left(\price \text{Shift} \right)\$ and \$\left(\text{R} \right)\$, press \$\left(\text{D} \right)\$ to turn the machine back on. Finally, release \$\left(\frac{1}{2} \text{Shift} \right)\$ and \$\left(\text{R} \right)\$. Note: The text and formats in the display are erased. Also the language, unit and clock settings will be cleared.
The power turns off when you try to print.	The batteries may be weak. Replace them.
The tape does not feed properly or the tape gets stuck inside the machine.	Check that the end of the tape feeds under the tape guides. The cutter lever is used while printing. Do not touch the cutter lever during printing.
All text and format settings need to be cleared to create a new label.	 Press Backspace key while holding down Shift key, or go into Function mode and select

Specifications

Item	Specification
Dimensions	6.7" (W) \times 4.4" (D) \times 2.3" (H) (167 mm (W) \times 110 mm (D) \times 58 mm (H))
Weight	0.5 lbs. (240 g) (without batteries and tape cassette)
Power supply	Four AAA-size alkaline batteries (LR03)
Tape cassette	Brother M tape (width) : 3/8" (9 mm), 1/2" (12 mm)

[CREATING LABELS]

MAKING TEXT

Switching Upper Case/Lower Case Gaps \rightarrow A B C D

Upper case (Caps ON) ÂBCD_

Lower case (Caps OFF) âbcd_


Entering Numbers

Num Lock ON

1 2 3_

Num Lock OFF a w e_

Entering Symbols

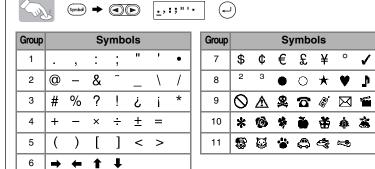

• To go to the next group, press (Symbol) To cancel operations, press

Entering Accented Characters

 $oldsymbol{\mathsf{A}}\simoldsymbol{\mathsf{Z}}igothermall$ igothermall **Accented Characters Accented Characters** A Á À Â Ä Æ Ã Ą Å Ā Ă a áàâäæãaåāă c ÇČĆ c çčć D ĎĐ d ďðđ E ÉÉÉËEĚÉĒ e éèêëęěėē G ĢĞ g ģğ ı İ İ î î î ī ī ı κĶ k k L ŁĹĹĽ N ÑŇŃŅ n ñňńņ O Ó Ó Ô Ø Ö Ő Œ Ő óòôøöõœő R ŘŔŖ rřŕτ s ŠŚŞŞß s šśşşß ΤŤŢÞ t ťţþ ^U ÚÙÛÜŲŮŪŰ u úùûüųůūű ΥΥΫ́ ууў z | žźż z ŽźŻ

 To cancel operations, press · The order of accented characters differ by the selected LCD language.

Making Two Line Text

Move the cursor to where the second line starts and press (-). Display abc+def_

Setting [Size]

J.SMITH

J.SMITH

[I+Outl](Italic Outline)

[Shadow]

(a) → (a) (b) [Size] (b) → (a) (Large] (c)

Z DESIGNING LABELS

J.SMITH **Setting [Width]**

[Normal] J.SMITH J.SMITH J.SMITH (fn + E))

J.SMITH

[Italic]

Setting [Style] (Vertical)

J.SMITH [I+Bold] (Italic Bold) J.SMITH J.SMITH [I+Shadow](Italic Shadow) [Vertical]

っ・の≥−⊢エ

 $(fn + (w)^{2})$

Setting [Undl/Frm] (Underline/Frame) (((n) + (R)⁴)

J.SMITH

 $f_n \Rightarrow \bigcirc [Undl/Frm] (\rightarrow) \Rightarrow \bigcirc [Undl] (\rightarrow)$ ABC <u>ABC</u> ABC **ABC** [Callout] [Banner] ABC ₽ ABC \ ABC 3

Setting [Length] (Label Length)(Auto / 1.2" - 12.0")


 $(f_0 + T)$ • You can also select the length by entering the length with \bigcirc $^1 \sim \bigcirc$ 0 • To return to [Auto], press $^{\text{Space}}$.

Setting [A/F](Auto Format) (fn + (y)) You can choose label length from five formats to create labels for various

VCR VHS Cassette spine 5.5" MiniDV Cassette spine Cassette case spine 3.5"

To Clear

By pressing the backspace key you will delete a character. (To delete a whole line of text, keep pressing the Backspace key)



To Clear All Text and Settings

Divider Tab



(h) → (1) AllClear (→) → Clear? (→)

This will not affect Time & Date or language settings.

Text Preview

You can preview the text before printing.

• The LCD shows the whole text and the label length (inch/mm), then returns to the

• Only the text can be previewed, not the font, style, size, underline/frame or any

3 PRINTING LABELS

Feeding (Tape Feed)



♦ Shift + Print

• The machine will feed 1.0" of tape, which may be needed when installing a new tape

Printing/Cutting

• To cut off the label, push in the tape cutter lever on the upper-left corner of the

• To prevent damage to the tape, do not try to cut while the message "Print" or "Feed" is displayed. Copies (Fn + (u))

You can print up to 9 copies of each label.

ⓐ → **②** [Copies] ← → **③** [1-9? 5] ←

COMPLETED LABELS

You can also select the number of copies by entering with $(\mathbf{Q})^{1} \sim (\mathbf{P})^{0}$.

CONTEROPO NOOR ☎05(8632)-4112

O DO NOT TOUCH <<< Ken Sampson >>>> ⊠Ken.S@P-touch.com 🕻 🛎 Merry X'mas 🎄 🏻

Removing the Label Backing

This machine is equipped with a peeler that allows you to easily remove the backing from labels.

Peel the printed label from backing and apply the label.

Insert the label, with the printed surface facing down, as far as possible

Fold back the label to the right and quickly pull out the label. The end of the backing is separated from the label.

USEFUL FUNCTIONS

Time & Date Function (fn + (1)°)

You can add the desired time and date to your text at the touch of a button. 8 Formats are available for printing time and date.

You can change the number of time/date by changing the clock setting.

To add Time & Date to your text: abc _ | 🕞 🖒 3/20/06_|

The cursor should be positioned where you wish to insert the time & date.

To select the format of Time & Date: © TimeDate → © Format → M/D/Y hm (~)

Example (March 20th 2006, 3:30PM) **Format** Description M/D/Y Month/ Date/ Year 03/20/06 M/D/Y hm 03/20/06 03:30PM Month/ Date/ Year time D/M/Y Date/ Month/ Year 20/03/06 D/M/Y hm 20/03/06 03:30PM Date/ Month/ Year time DMY 20.03.06 Date.Month.Year D.M.Y hm 20.03.06 03:30PM Date.Month.Year time Y-M-D Year- Month- Date 06-03-20 Y-M-D hm Year- Month- Date time 06-03-20 03:30PM

Example: setting the clock to March 20th 2006, 10:30AM

To change the Clock Setting:

→ MM/01/06

Fn TimeDate Setting Month (MM), Date (DD), Year (YY)

(→) ⇒ Setting Hour (hh) and Minute (mm) ←) ⇔ 10:mm hh:00

input "10" Select AM/PM with and press

pressing (n) and the shortcut key shown in the table below.

You can also confirm the figure and move to the next setting by using right cursor key.

Clock

03/20/YY

(→**)** →

→

Function Shortcuts $(\text{ fn } + \text{ Q}' \sim \text{ O}')$ In addition to the basic steps to search for a function, PT-70 provides you with function shortcuts so you can easily jump to a frequently used function just by

To confirm, press (-) Function **Function** (Q) Size $(\mathbf{Y})^{\mathbf{6}}$ Auto Format $(\mathbf{w})^2$ $(\mathbf{U})^{\prime}$ Width Copies (E)³ Time & Date Style $(R)^4$ (o)⁵ Underline/Frame All Clear (T)⁵

Label Length

IMPORTANT WARRANTY INFORMATION Thank you for purchasing this Brother Product. We hope that you will enjoy using it. We

suggest that you keep all packing and other materials SHOULD YOU ENCOUNTER ANY PROBLEMS WITH YOUR PRODUCT, PLEASE DO NOT RETURN YOUR

PRODUCT TO THE STORE! After referring to the instruction manual, if you still need assistance, call Brother Customer Service at:
Canada: 1-877-brother (276-8437)

In Montreal: 514-685-6464 To Find a service Center Please Call 1-877-brother.